



SIMCOM_EVB Kit_User Guide

SIMCom Wireless Solutions Limited

Building B, SIM Technology Building, No.633, Jinzhong Road
Changning District, Shanghai P.R. China

Tel: 86-21-31575100

support@simcom.com

www.simcom.com

Document Title:	SIMCOM_EVB Kit_User Guide
Version:	V1.03
Date:	2023-07-25
Status:	Released

GENERAL NOTES

SIMCOM OFFERS THIS INFORMATION AS A SERVICE TO ITS CUSTOMERS, TO SUPPORT APPLICATION AND ENGINEERING EFFORTS THAT USE THE PRODUCTS DESIGNED BY SIMCOM. THE INFORMATION PROVIDED IS BASED UPON REQUIREMENTS SPECIFICALLY PROVIDED TO SIMCOM BY THE CUSTOMERS. SIMCOM HAS NOT UNDERTAKEN ANY INDEPENDENT SEARCH FOR ADDITIONAL RELEVANT INFORMATION, INCLUDING ANY INFORMATION THAT MAY BE IN THE CUSTOMER'S POSSESSION. FURTHERMORE, SYSTEM VALIDATION OF THIS PRODUCT DESIGNED BY SIMCOM WITHIN A LARGER ELECTRONIC SYSTEM REMAINS THE RESPONSIBILITY OF THE CUSTOMER OR THE CUSTOMER'S SYSTEM INTEGRATOR. ALL SPECIFICATIONS SUPPLIED HEREIN ARE SUBJECT TO CHANGE.

COPYRIGHT

THIS DOCUMENT CONTAINS PROPRIETARY TECHNICAL INFORMATION WHICH IS THE PROPERTY OF SIMCOM WIRELESS SOLUTIONS LIMITED. COPYING, TO OTHERS AND USING THIS DOCUMENT, ARE FORBIDDEN WITHOUT EXPRESS AUTHORITY BY SIMCOM. OFFENDERS ARE LIABLE TO THE PAYMENT OF INDEMNIFICATIONS. ALL RIGHTS RESERVED BY SIMCOM IN THE PROPRIETARY TECHNICAL INFORMATION, INCLUDING BUT NOT LIMITED TO REGISTRATION GRANTING OF A PATENT, A UTILITY MODEL OR DESIGN. ALL SPECIFICATION SUPPLIED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.

SIMCom Wireless Solutions Limited

Building B, SIM Technology Building, No.633 Jinzhong Road, Changning District, Shanghai P.R.China
Tel: +86 21 31575100
Email: simcom@simcom.com

For more information, please visit:

<https://www.simcom.com/download/list-863-en.html>

For technical support, or to report documentation errors, please visit:

<https://www.simcom.com/ask/> or email to: support@simcom.com

Version History

Date	Version	Description of change	Author
2016.07.12	1.00	Origin	shijie.yuan
2016.08.17	1.01	1. Update earphone	shijie.yuan
		2. Add LED indicator for Status	shijie.yuan
2020.04.22	1.02	Modify the Format	Xiong Yuqing
2023.07.25	1.03	1. Modify the document format and content description	Qianjin Bai
		2. Add Table Index	

SIMCom
Confidential

Contents

Version History	3
Contents	4
Figure Index	6
1 SIMCom-EVB Overview	8
2 EVB Accessory	10
3 Accessory Interface	11
3.1 Power Interface	11
3.2 Audio Interface.....	11
3.3 SIM Card Interface	12
3.4 USB Interface	12
3.5 Power Switch.....	13
3.6 POWER_ON Button	13
3.7 RF Switch	13
3.8 LED Indicator.....	13
4 Test Interface	14
4.1 Test Point A.....	14
4.2 Test Point B.....	15
4.3 Test Point C	16
4.4 Test Point D	17
4.5 Test Point E.....	18
5 Illustration	19
5.1 SIMCom TE Installation and Uninstallation.....	19
5.2 Power On Module.....	20
5.3 Registering Network and Making a Call	20

Table Index

Table 1: EVB Function Interface Location	9
Table 2: EVB Accessory.....	10
Table 3: 5V Source Input Interface	11
Table 4: Headset Interface.....	11
Table 5: LED Indicator Interface	13
Table 6: Test Point A Pin Description	14
Table 7: Test Point B Pin Description.....	15
Table 8: Test Point C Pin Description	16
Table 9: Test Point D Pin Description	17
Table 10: Test Point E Pin Description.....	18

SIMCom
Confidential

Figure Index

Figure 1: SIMCom-EVB TOP View	8
Figure 2: SIMCOM-EVB BOTTOM View	8
Figure 3: EVB Accessory	10
Figure 4: Audio Interface.....	11
Figure 5: Virtual Serial Port.....	12
Figure 6: Test Interface Overview	14
Figure 7: Test Point A.....	14
Figure 8: Test Point B.....	15
Figure 9: Test Point C	16
Figure 10: Test Point D	17
Figure 11: Test Point E.....	18
Figure 12: TE Assembly.....	19

SIMCom
Confidential

SCOPE

THIS DOCUMENT DESCRIBES HOW TO USE SIMCOM-EVB TO DO TEST; USER CAN GET USEFUL INFO ABOUT THE SIMCOM-EVB QUICKLY THROUGH THIS DOCUMENT.

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME.

SIMCom
Confidential

1 SIMCom-EVB Overview

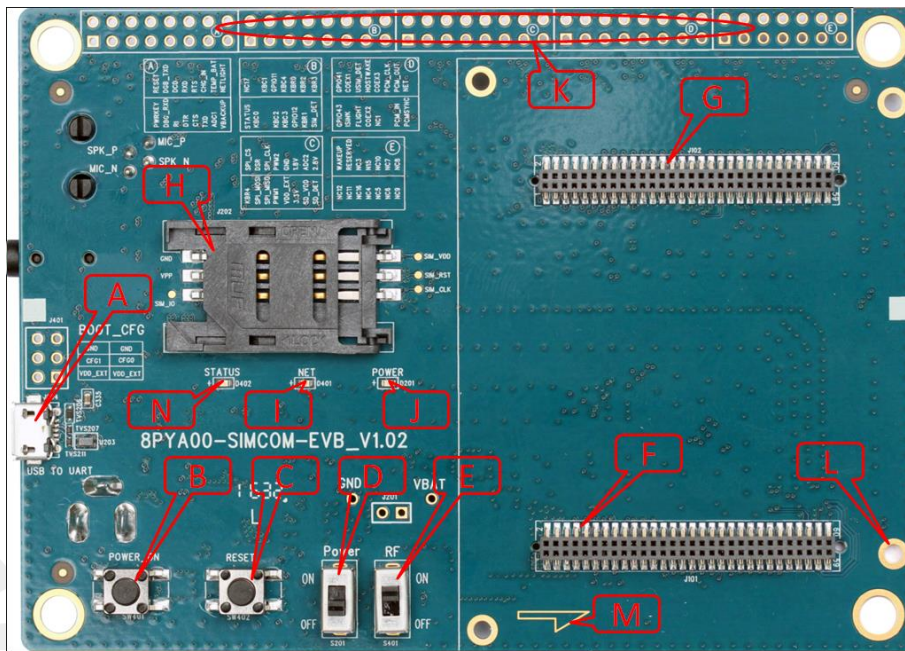


Figure 1: SIMCom-EVB TOP View

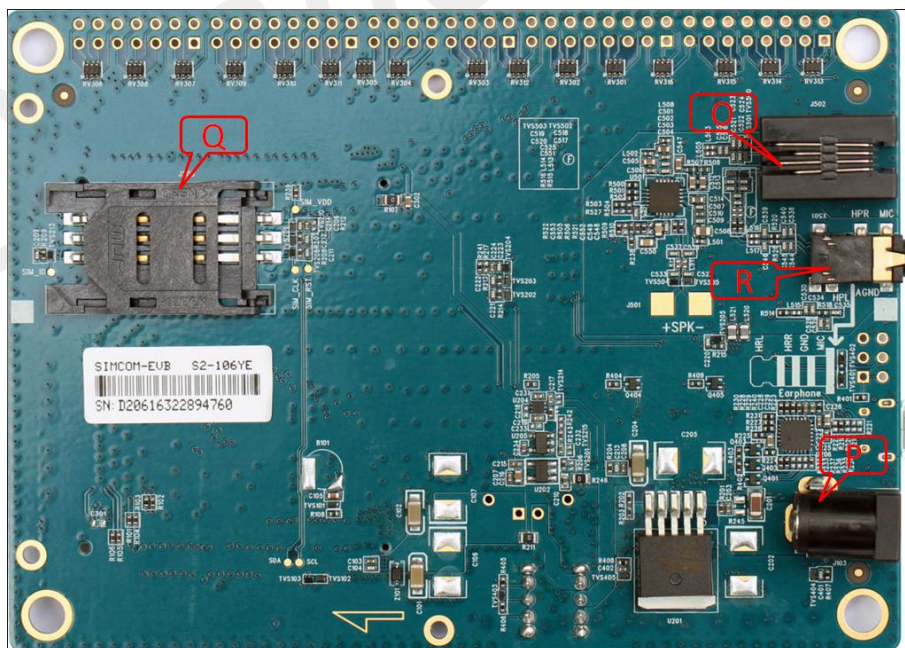


Figure 2: SIMCOM-EVB BOTTOM View

Table 1: EVB Function Interface Location

No.	Description
A	USB jack
B	Powerkey
C	Reset
D	Power switch
E	RF switch
F	TE connector
G	TE connector
H	SIMcard holder 1
I	LED indicator for Netlight
J	LED indicator for Power
K	Test Point
L	Studs and nuts
M	Mark of TE Module direction
N	LED indicator for Status
O	Handset jack
P	Power jack
Q	SIMcard holder 2
R	Earphone jack

2 EVB Accessory

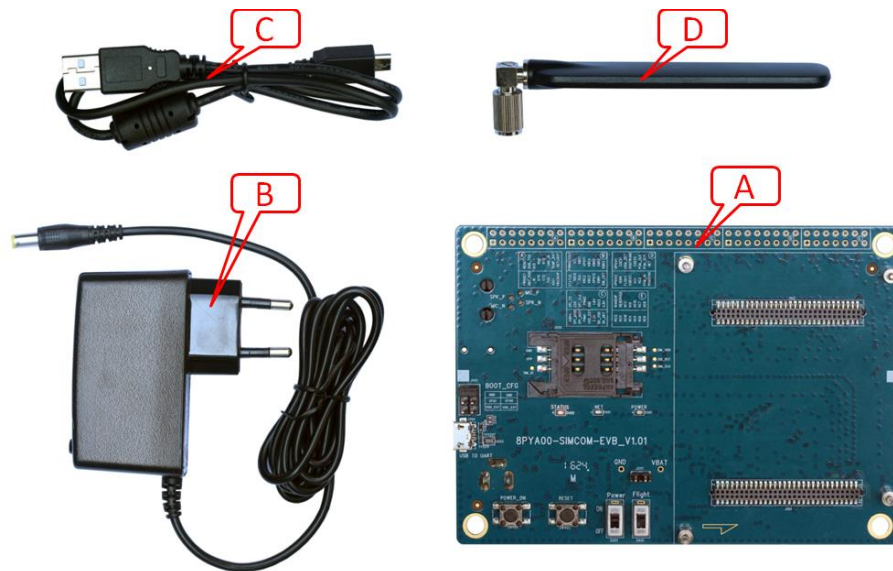


Figure 3: EVB Accessory

Table 2: EVB Accessory

No.	Description
A	SIMCOM-EVB
B	5V DC adapter
C	USB cable
D	GSM/WCDMA/LTE antenna

3 Accessory Interface

3.1 Power Interface

Table 3: 5V Source Input Interface

Pin	Signal	I/O	Description
1	Adapter input	I	5V/2.0A DC source input

3.2 Audio Interface

Table 4: Headset Interface

Pin	Signal	I/O	Description
1	MICN	I	Negative microphone input
2	SPKN	O	Negative receiver output
3	SPKP	O	Positive receiver output
4	MICP	I	Positive microphone input

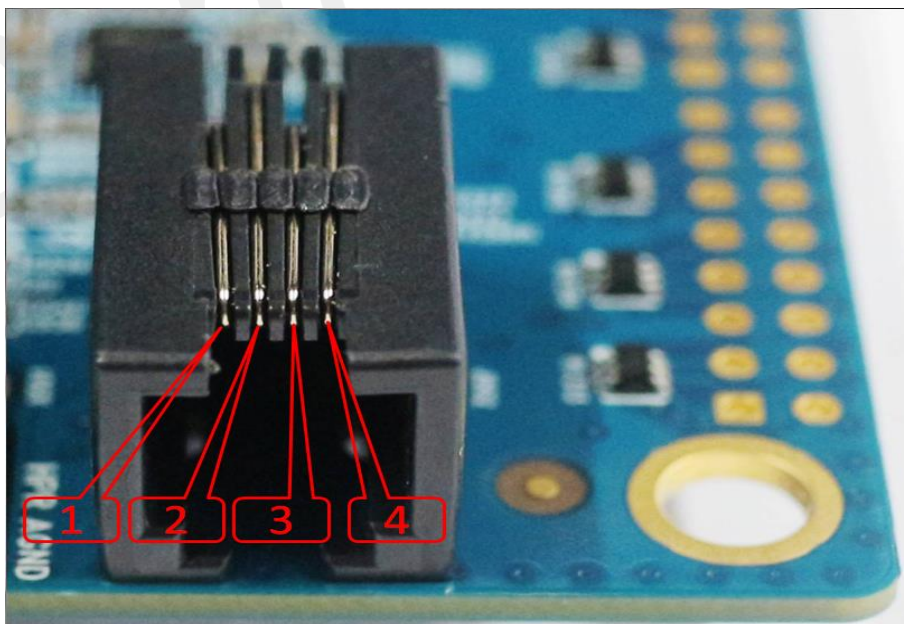


Figure 4: Audio Interface

3.3 SIM Card Interface

SIMCard holder 1(J202) is the main holder, SIM2(J203) is for special module which supports dual sim.

3.4 USB Interface

EVB USB interface (A) could be imaged to two virtual ports.

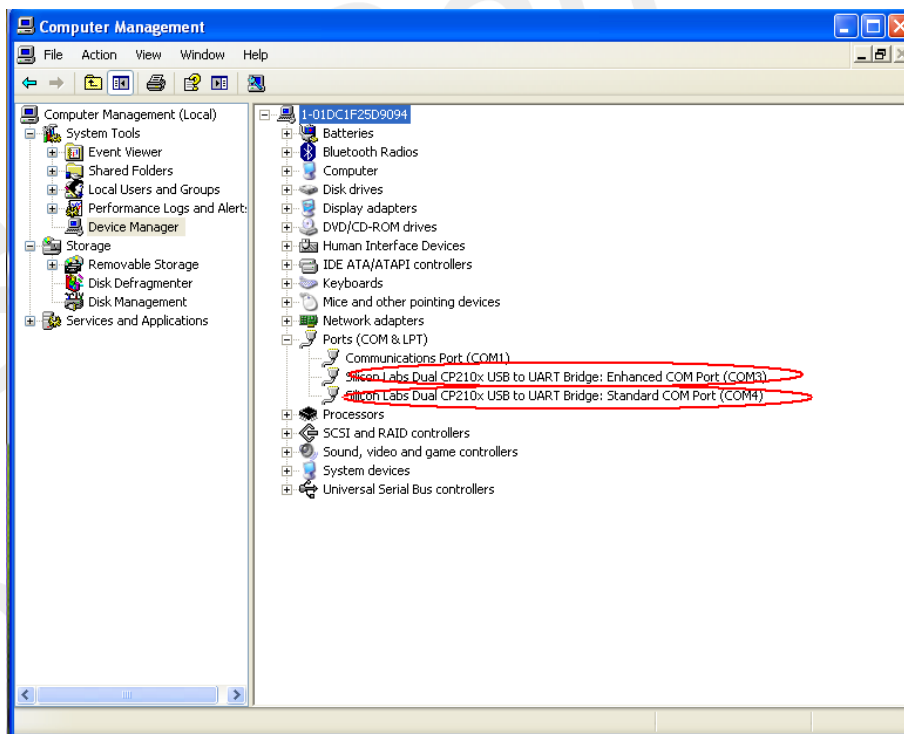


Figure 5: Virtual Serial Port

Enhanced COM port : Communication UART (Used for AT command communication and data transmission)

Standard COM port : Debug UART (Used for software console and log output)

CP2105 driver is available here:

<http://www.silabs.com/products/interface/usb-bridges/Pages/usb-bridges.aspx>

3.5 Power Switch

After 5V Adapter inserted, switch S201 on, then power LED (D201) will be solid on.

3.6 POWER_ON Button

After give power to EVB, press the POWER_ON button for more than 1.5 seconds, the module will be turned on, the STATUS LED light (D402) will be solid on.

3.7 RF Switch

RF switch (S401) could control module RF on or off. That's hardware control of flight mode. When RF on, flight mode is off, when RF switch off, flight mode is on.

3.8 LED Indicator

LED light work's behaviour is as below.

Table 5: LED Indicator Interface

Name	Description	Status
D201	Power ON/OFF indicator	Bright : EVB Power ON; Extinct: EVB Power OFF
D401	NET status indicator	Blinking at a certain frequency according various net status
D402	Module status indicator	Bright : Module runs normally Extinct: Module is powered down

4 Test Interface



Figure 6: Test Interface Overview

4.1 Test Point A

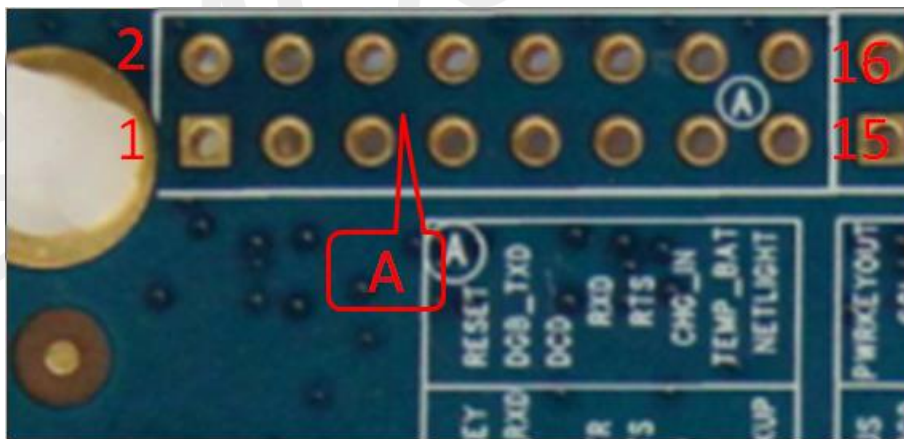


Figure 7: Test Point A

Table 6: Test Point A Pin Description

Pin	Signal	I/O	Description
1	PWRKEY	I	Power on key
2	RESET	I	Reset key
3	DBG_RXD	I	Receive data
4	DBG_TXD	O	Transmit data
5	RI	O	Ring Indicator
6	DCD	O	Data carrier detection
7	DTR	I	Data Terminal Ready
8	RXD	I	Receive data

9	CTS	O	Clear to Send
10	RTS	I	Request to Send
11	TXD	O	Transmit data
12	CHG_IN	I	Charge in detect
13	ADC1	I	ADC input
14	TEMP_BAT	I	Temperature detect
15	VBACKUP	PI	Battery for RTC
16	NETLIGHT	O	LED indicator for NET Light

4.2 Test Point B

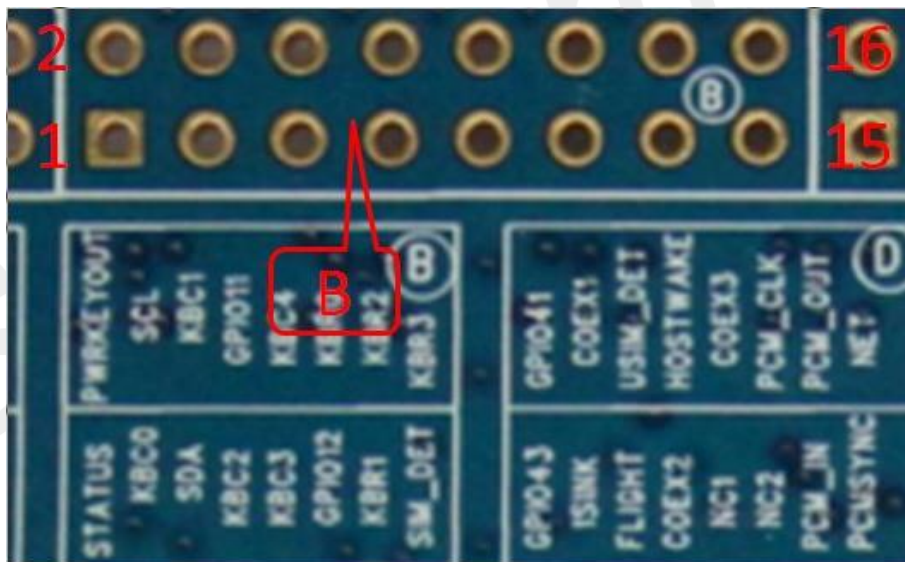


Figure 8: Test Point B

Table 7: Test Point B Pin Description

Pin	Signal	I/O	Description
1	STATUS	O	Module working on indicate
2	NC17		No connect
3	KBC0	I	KEYPAD input
4			
5			
6	KBC1	I	KEYPAD input
7	KBC2	I	KEYPAD input
8	GPIO11	I/O	GPIO
9	KBC3	I	KEYPAD input
10	KBC4	I	KEYPAD input

11	GPIO12	I/O	GPIO
12	KBR0	I	KEYPAD input
13	KBR1	I	KEYPAD input
14	KBR2	I	KEYPAD input
15	SIM_DET	I	SIM detect
16	KBR3	I	KEYPAD input

4.3 Test Point C

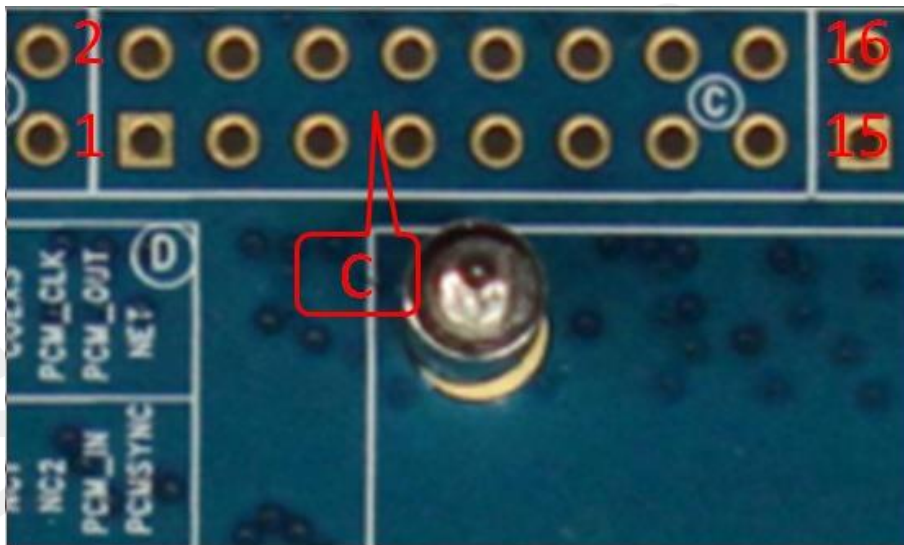


Figure 9: Test Point C

Table 8: Test Point C Pin Description

Pin	Signal	I/O	Description
1	KBR4	I	KEYPAD input
2	SPI_CS	O	SPI Chip Select
3	SPI_MOSI	O	SPI Data output
4	DSR	O	Data Set Ready
5	SPI_MISO	I	SPI Data input
6	SPI_CLK	O	SPI Clock output
7	PWM1	O	PWM output
8	PWM2	O	PWM output
9	VDD_EXT	PO	Power output from Module
10	GND	GND	GND
11	WLAN_3V3	PO	WLAN 3.3V power
12	VCC_1V8	PO	1.8V Power

13	SD_VDD	PO	Power for SD Card
14	ADC2	I	ADC input
15	SD1_DET	I	SD detect
16	VDD_3V3	PO	3.3V power

4.4 Test Point D

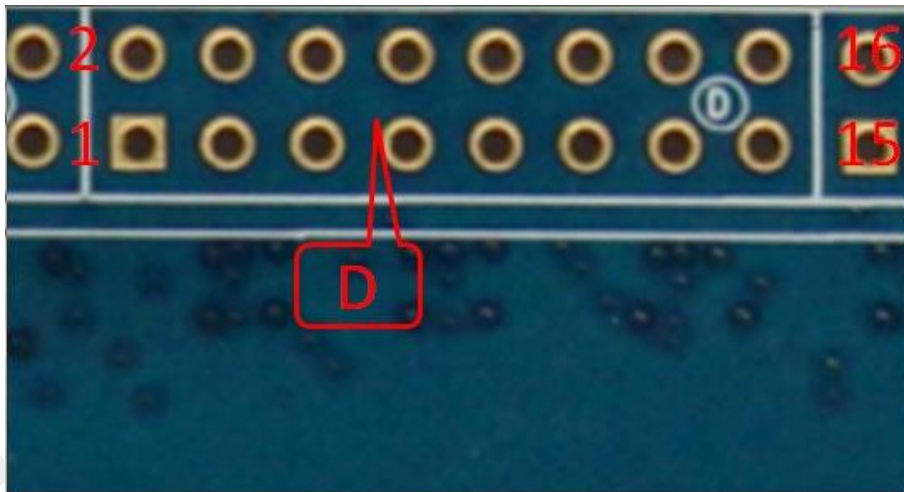


Figure 10: Test Point D

Table 9: Test Point D Pin Description

Pin	Signal	I/O	Description
1	GPIO43	I/O	GPIO
2	GPIO41	I/O	GPIO
3	ISINK	AI	Ground-referenced current sink.
4	COEX1	O	RF synchronizing between Wi-Fi and LTE
5	F LIGHTMODE	I	Flight mode
6	SIM2_DET	I	SIM detect
7	COEX2	O	RF synchronizing between Wi-Fi and LTE
8	HOST_WAKE	O	Host wake
9	NC1		No connect
10	COEX3	O	RF synchronizing between Wi-Fi and LTE
11			
12	PCM_CLK	O	PCM data bit clock
13	PCM_IN	I	PCM data input
14	PCM_OUT	O	PCM data output

15	PCM_SYNC	O	PCM data frame sync signal
16	NET_STATUS	O	NET status

4.5 Test Point E

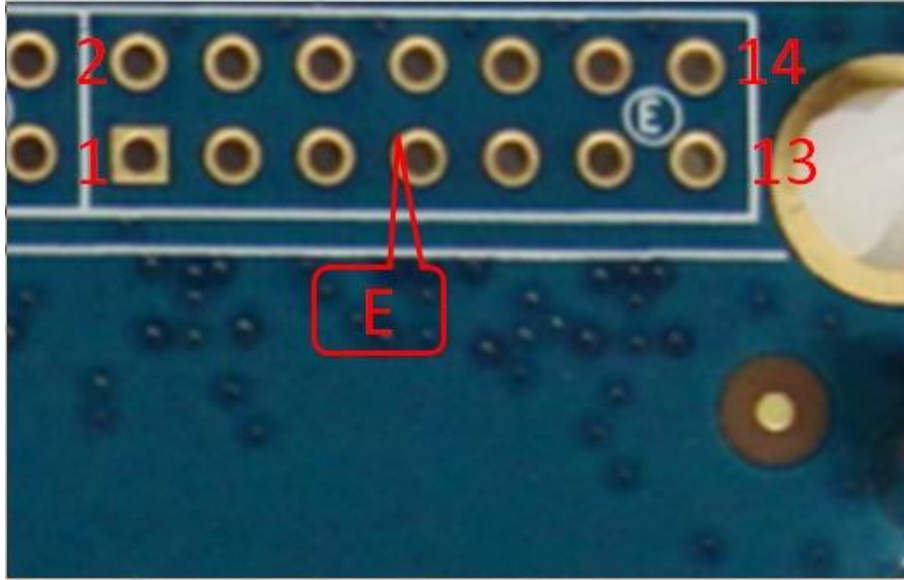


Figure 11: Test Point E

Table 10: Test Point E Pin Description

Pin	Signal	I/O	Description
1	NC12		No connect
2	WAKEUP_IN	I	Sleep mode control
3	NC11		No connect
4	RESERVED		
5	NC16		No connect
6	NC3		No connect
7	NC4		No connect
8	NC15		No connect
9	NC5		No connect
10	NC10		No connect
11	NC6		No connect
12	NC7		No connect
13	NC9		No connect
14	NC8		No connect

NOTE

Please refer to specified TE schematic for test point if there has difference.

5 Illustration

5.1 SIMCom TE Installation and Uninstallation

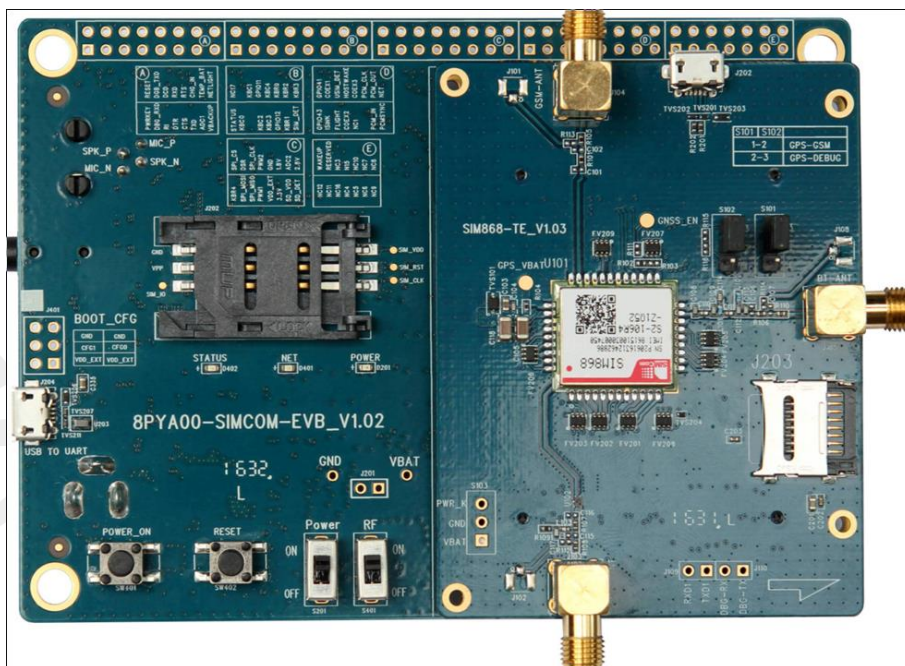


Figure 12: TE Assembly

Install TE board:

- 1) There have four studs on board near connectors. It's easy to put TE in correct position without making mistake.
- 2) Take care of TE SMA connector direction;
- 3) Take care of the mark for TE direction on EVB board.

Uninstall and replace TE board:


- 1) It's a little hard to remove TE board from EVB connector, because they are connected closely.
- 2) Take care with power to remove from SMA connector side slowly.

5.2 Power On Module


- 1) Connect the SIMCOM-TE to the 2x60pins connector on EVB, plug in 5V DC adapter, the switch S201 to “ON” state; keep S401 to “ON” position.
- 2) Press the POWER_ON button for more than 1.5 second and then release, SIMCOM module power on. After the module is on, the LED light D402 will be bright, and the LED light D401 will blink at a certain frequency. Through the state of LED, you can judge registering status of the module. For detailed description, please refer to SIMCOM HD document.

5.3 Registering Network and Making a Call


- 1) Install antenna to TE board, insert SIM card.
- 2) Connect the USB cable to the USB jack; launch the Hyper Terminal in computer.
- 3) Check the serial port number from Device Manager list.

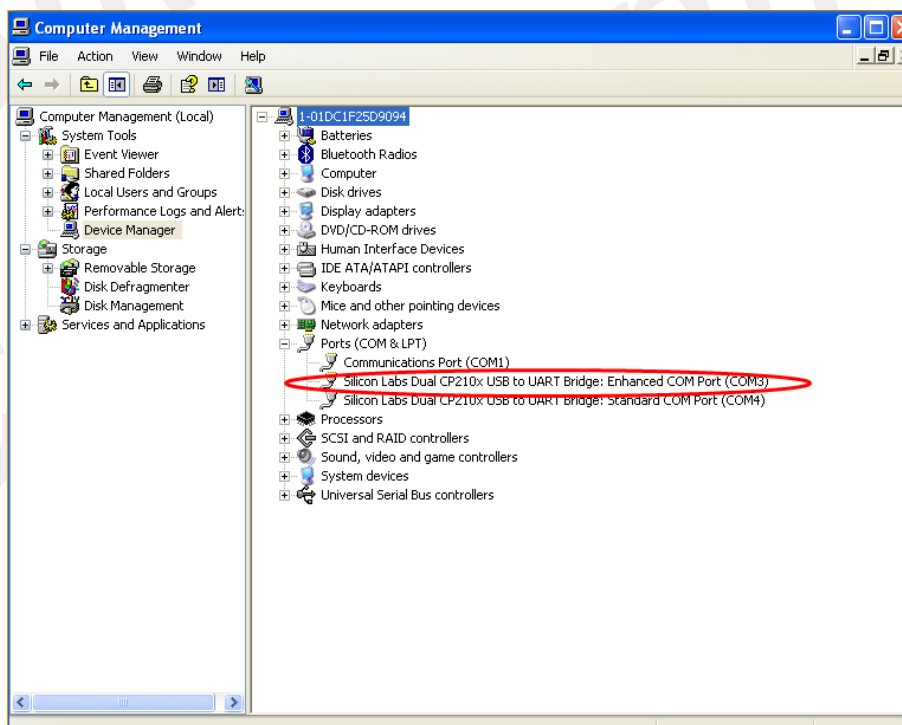


- 4) Use the Hyper Terminal to make a call from module as following:
 - a) Launch hyper terminal

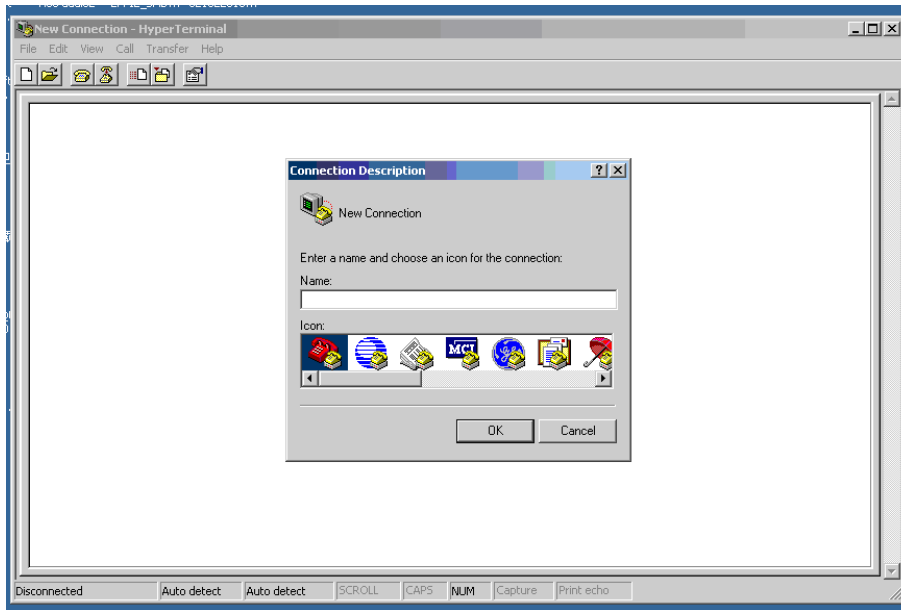

b) Configure right com port

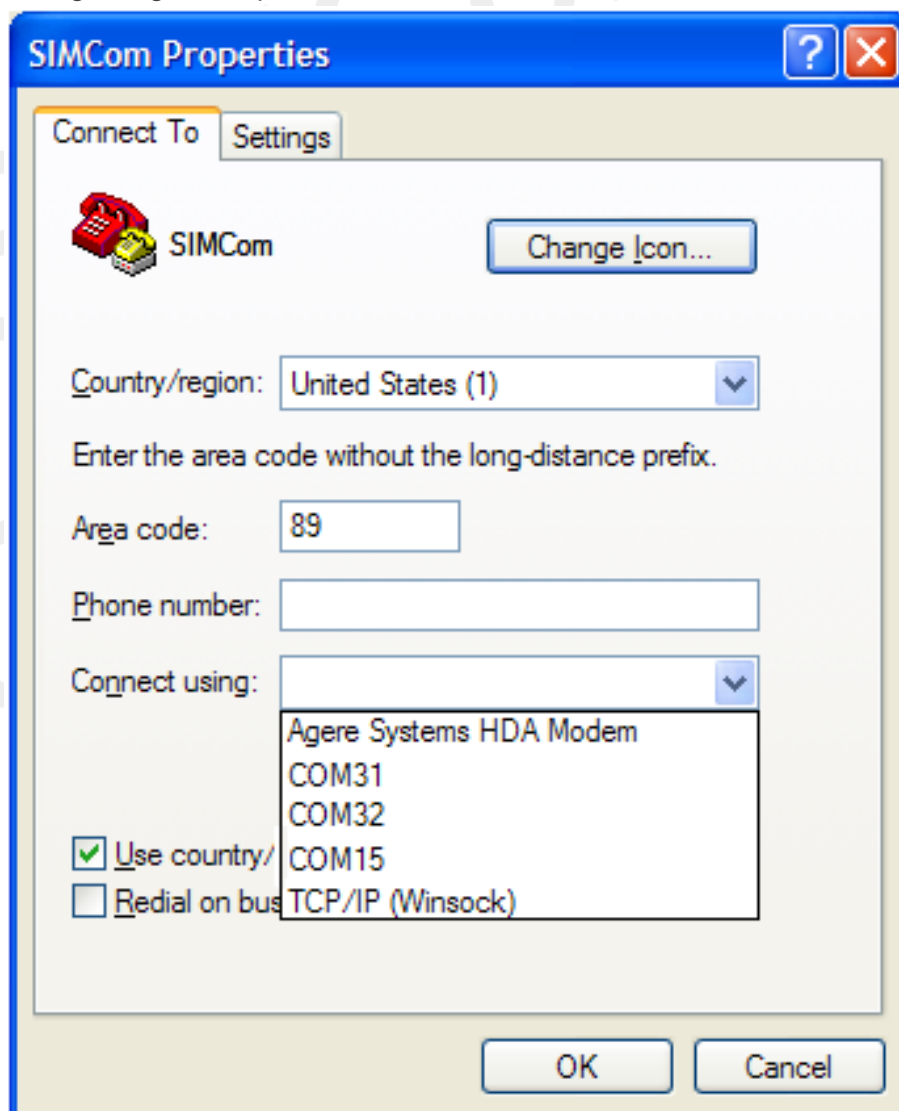

c) Configure right baud rate

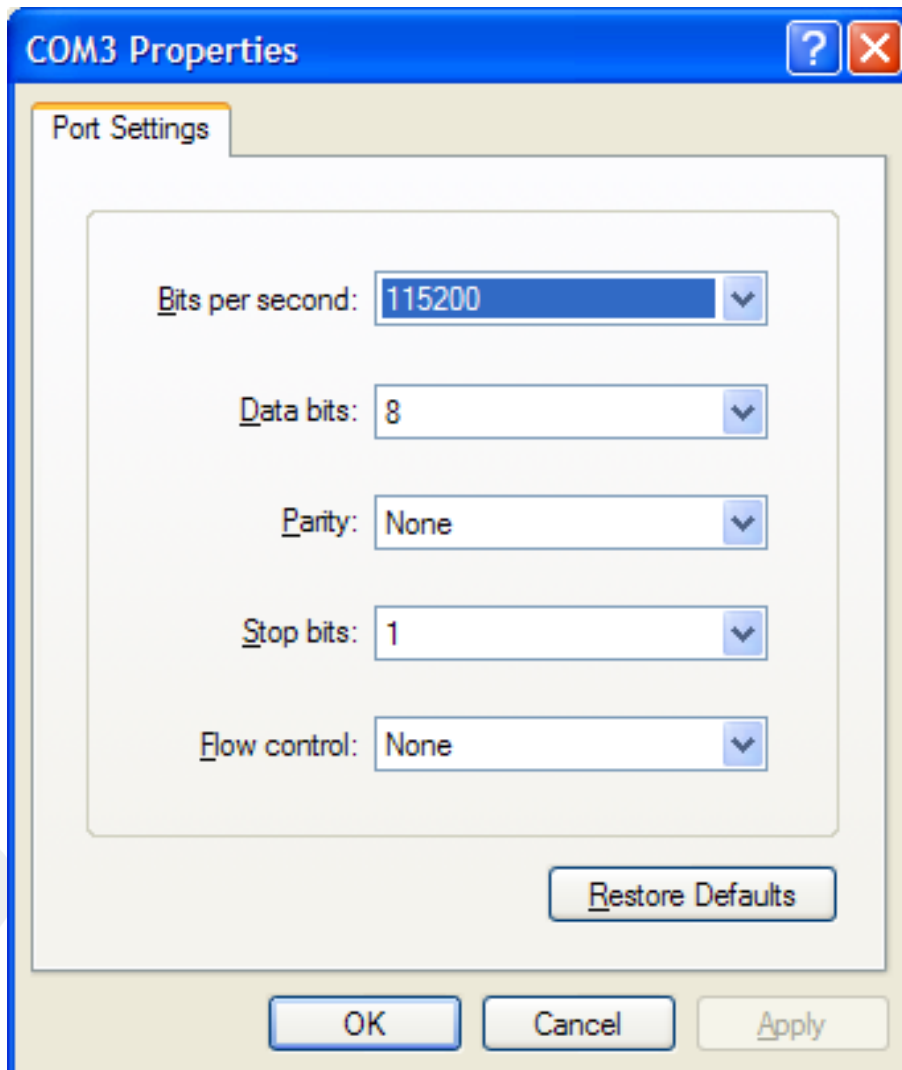

d) Lastly connect the module and make a call.

